

12


- 1: HDMI OUT1-2 --- HDMI output 1-2;
- 2: HDMI IN1-4 --- HDMI input 1-4;
- 3: DC/5V --- 5V power supply;
- 4: IR --- IR Receive;
- 5: EDID --- EDID management
- 6: R/L OUT1-2 --- Stereo output
- 7: Optical1-2 --- Optical output
- 8: HDMI IN1-4 --- HDMI input indicator
- 9: Key2 --- Video switching button
- 10: Key1 --- Video output switching button

EDID setting

Position 1	Position 2	Position 3	Position 4	Function
0	0	0	0	Copy the EDID of HDMI OUT 1
0	0	0	1	Copy the EDID of HDMI OUT 2
0	0	1	0	3D 1080P 2H LPCM
0	0	1	1	3D 1080P stereo 5.1H (LPCM/Dolby/DTS)
0	1	0	0	2D 1080P stereo 2 H (LPCM)
0	1	0	1	2D 1080P stereo 5.1H (LPCM/Dolby/DTS)
0	1	1	0	3D 4k stereo 2 H (LPCM)
0	1	1	1	3D 4k stereo 5.1H(LPCM/Dolby/DTS)

Noted: the dial switch to dial downward is 1 dial upward is 0

The Remote Control instruction :

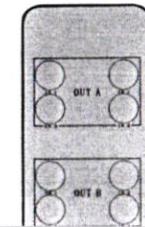

- 1) The four buttons on OUT A is the corresponding input source IN1-IN4 which out from OUT A, IN1-IN4 can be switched freely.
- 2) The four buttons on OUT B is the corresponding input source IN1-IN4 which out from OUT B, IN1-IN4 can be switched freely.

Instruction of Buttons and LED:
 1. Instruction of LED: IN1-IN4 indicator is the corresponding input source